

501-15

Trouble Shooting

PROBLEM

- 1.** Is the light on in the transformer?



➔
NO

SOLUTION

Check the power outlet and wire to transformer
Unplug for the 3 minutes, plug in again
Still no light?
Change the transformer

↓ YES

- 2.** Is the desk at its lowest or up a bit (but not in top position)?
Move the desk down

➔
NO

No, go to no. 5

↓ YES


- 3.** Connect the motor to the transformer – very briefly (Remove quickly!!)
Did the desk frame move?

➔
NO

Change the power leg

↓ YES

- 4.** Connect the wires again (red/red) according to assembly instruction

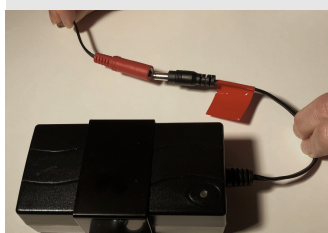

↓ YES

- 5.** Check if the buttons are used correctly.
Does the frame work?



➔
NO

Change the control panel